

Fault finding & General cleaning

1. SENSOR WILL NOT OPERATE AT ALL

- Check all electrical connections (see Fig 3 on page 3).
- Check fuse (Mains/PSU model only) max 3 amp fuse
- Voltage too low. Check shower input voltage (PSU output voltage - 6v DC).
- Voltage too low. Replace battery DVS code AT00 - 026 (CRP2 or DL223A) Lithium Cell only.
- Check all connectors are clean and dry (shown in Fig 3).
- Check for cable damage.
- For Mains/PSU and battery models, disconnect for 1 minute then reconnect and allow sensor to recalibrate.
- Check water is turned on.
- Check the solenoid valve is fitted correctly.
- Check valve operation.
- Check for dirt or debris in the solenoid valve.
- Water pressure is too low / too high.

2. VALVE OPERATES IN REVERSE

- (Water runs when hand is moved away from sensing area and stops when returned to sensing area)
- Reversed valve polarity (contact Dart Valley Systems)

3. SENSOR OPERATES INTERMITTENTLY

- Clean sensor lens (with nonabrasive materials only).
- Shower may be installed too close to an R.F. interference source or direct sunlight.
- Water pressure too low for valve to operate reliably (minimum of 1 BAR required) for standard solenoid valves.
- Voltage too low. Check voltage (PSU output voltage - 6v DC).

- Voltage too low. Replace battery, CRP2 or DL223A Lithium Cell only.
- Disconnect power for 1 minute, then reconnect and allow the sensor to recalibrate.

General Cleaning

IMPORTANT: Do not use abrasive materials or cleaners. Only use soap and water or nonabrasive cleaners.

Valve Servicing

The valve will require periodical servicing and cleaning, please contact DVS for servicing.

Do not attempt to dismantle the valve if you are unfamiliar with electronic solenoid valves.

Optional Parts

AC17 - 004	Low pressure 0-1.0 Bar 6V 4mm solenoid valve
AT00 - 200	1m PSU cable extension
AT00 - 201	2m PSU cable extension

Warranty, Support & End of Life Disposal

Warranty

The shower sensor kit is guaranteed for 5 years from purchase against defective material and assembly.

The solenoid valve is guaranteed for 12 months, subject to water condition, however it is expected that the valve internals will operate efficiently for many years.

Support

For technical support please visit our technical pages on our website at www.dartvalley.co.uk or contact us by e-mail at techsupport@dartvalley.co.uk Alternatively, you can telephone us direct on 01803 529021 and our customer service team will be pleased to help you.

Disposal of electrical and electronic equipment

The use of this crossed out wheeled bin logo indicates that this product needs to be disposed of separately to any other household waste.

Within each of the European Union member countries, provisions have been made for the collection and recycling of unwanted electrical and electronic equipment. Outside of the EU it will be necessary to dispose of this product at your local community waste collection or recycling centre. In order to help preserve our environment we ask that you dispose of this product correctly. Please contact your local council for collection centre details.

Disposal of waste batteries



The use of this crossed out wheeled bin logo indicates that the battery needs to be disposed of separately to any other household waste.

Within each of the European Union member countries, provisions have been made for the collection and recycling of waste batteries. Outside of the EU it will be necessary to dispose of this at your local community waste collection or recycling centre.

In order to help preserve our environment we ask that you dispose of this battery correctly. Please contact your local council for collection centre details.

Head Office


Dart Valley Systems Ltd
Kemmings Close
Long Road
Paignton
Devon
UK
TQ4 7TW

Contact Details

t : +44 (0) 1803 529021
f : +44 (0) 1803 559016
e : techsupport@dartvalley.co.uk
w : www.dartvalley.co.uk



Wall Mounted Shower Sensor Installation & Operating Instructions

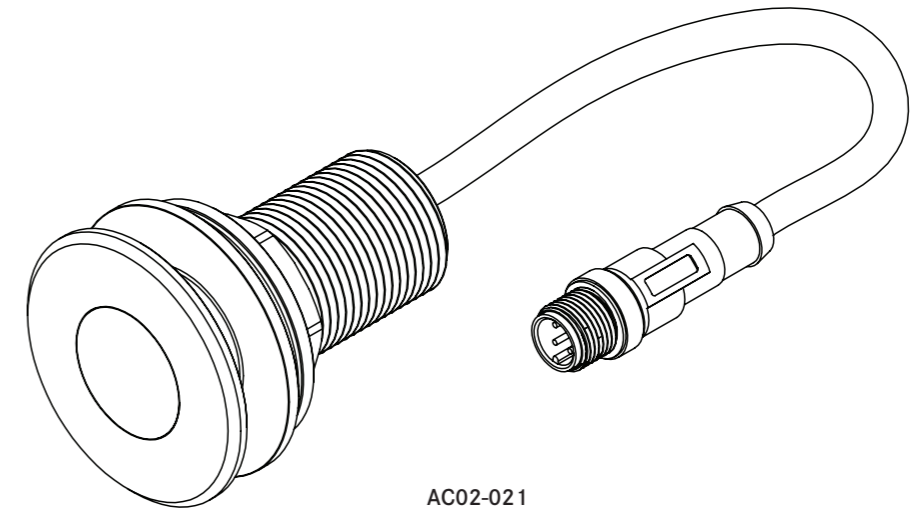

AC02-021

Step 1 : Safety first

These instructions relate to the use of the **Wall Mounted Shower Sensor** only, any external or 'add-on' parts will be supplied with separate instructions.

Appropriate personal protective equipment must be worn when installing, calibrating and commissioning this product.

It is recommended that the electrical part of the installation be carried out by a qualified electrician in accordance with the latest electrical regulations. It is also recommended that any plumbing is carried out by a qualified plumber.

This is an electronic device which must be installed correctly to perform correctly.


If the appliance is used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, they must be given adequate supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.




IMPORTANT: Please read these instructions carefully and follow each stage in order!

Step 2 : Parts


Your kit will comprise the following parts*:

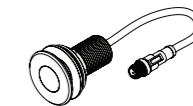


Sensor
AC02-021

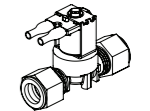


6v DC BETA valve
AC17-010

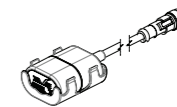


Battery Box
AT00-024

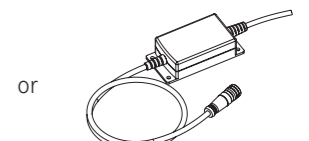

or
DVS Power Supply
AT00-029

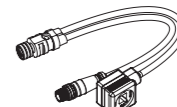

Y Splitter Lead
AT00-202

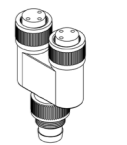

Optional Y Distributor
AT00-212

Instruction Manual (x1)

*Not to scale

Step 3 : Sensor Installation

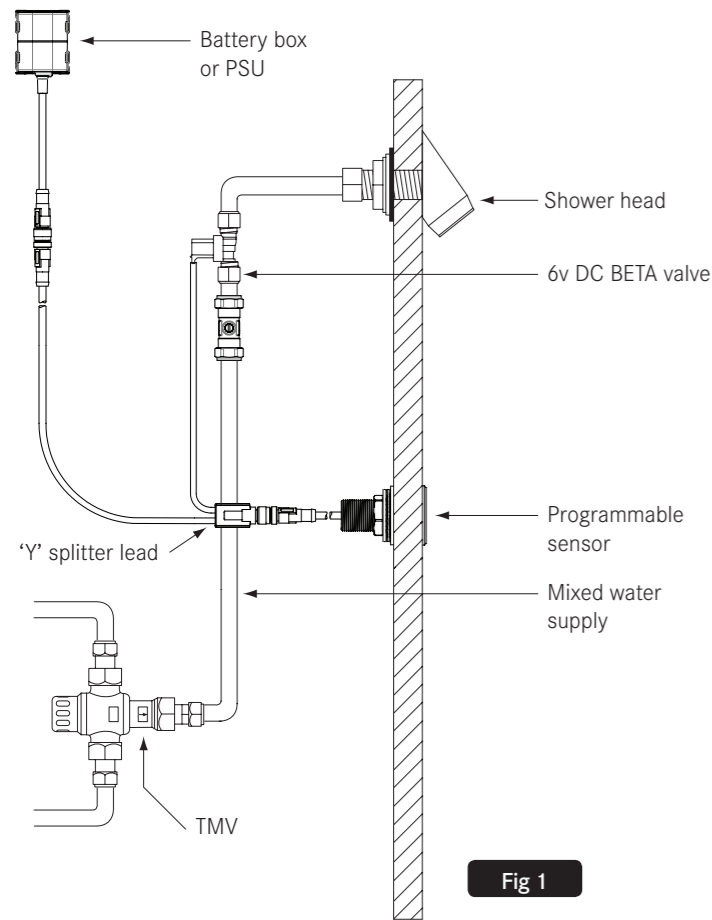


Fig 1

Caution! For mains powered setups you must use the DVS AT00-029 power supply unit. Do not attempt to use any other device or power supply system.

Ensure the battery box or power supply is left disconnected at this stage.

A maximum of 3 showers can be run from a single PSU.

Please Note: Only 1 shower can be run from a single battery box.

Note for Multiple Installation kits (cable extensions):

2 Station Kits contain 1x AT00-035

3 Station Kits contain 2x AT00-035's and 1x AT00-033

DVS recommend the height of the shower head to be 2m from floor level and the sensor 1m.

The detectable range of the sensor will be default to approx 60mm, however, the range is fully adjustable via the Handheld Programmer (available separately).

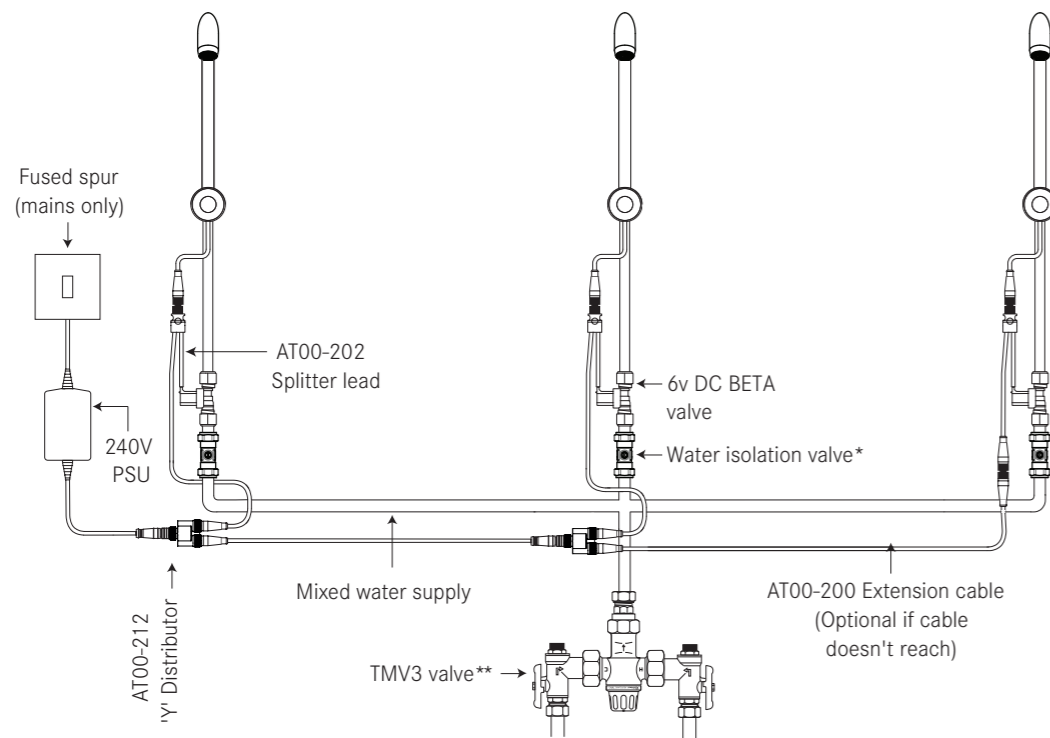


Fig 2

*Not supplied. Can be ordered separately from DVS.

**Not supplied. Required for warm water output and to comply with current water byelaws, as per current TMV guidelines. Can be ordered separately from DVS.

Pressure Notes: DVS recommend a minimum 1 BAR pressure for shower systems.

Step 4 : Preperation

You must read these instructions thoroughly before attempting to install the shower. First check the solenoid valve supplied is suitable for the site's water pressure and conditions.

The solenoid valve requires 1 - 10 BAR water pressure and upto 90°C water temperature. If your water pressure is low (less than 0.2 BAR) low pressure valves should be obtained from your supplier, see 'Fault finding & General cleaning'.

Pre-Fitting

First turn off the water supply. If possible select an upright position for the solenoid valve. Check correct water flow direction on installation of the solenoid valve.

In default mode the shower system will operate as set, to change these settings please refer to the DVS Handheld Programmer instructions.

Step 6 : Plug & Socket Connections

Caution! Mount the battery box or power supply with care, in a dry location, away from extremes in temperature and not exposed to dirt, dust or damp.

Ensure the battery box or power supply is left disconnected at this stage.

Electrical cable connection for Power Supply Unit (PSU)

It is recommended that the electrical part of the installation be carried out by a qualified electrician in accordance with the latest electrical regulations.

A 1m length of 0.5mm 2 core flex is supplied with the PSU - this must not be extended.

Each PSU should be connected separately via a 3 amp fused spur. The PSU must be permanently connected to the supply. A suitable means of disconnection should be provided, in accordance with local electrical regulations. If the mains lead becomes damaged, this product should not be used. Contact DVS for replacement parts.

NOTE: Incorrect fuses may void warranty.

Final Stage

Ensure all cable sockets and plug connections are clean and dry, then connect the shower to the split connector and solenoid valve firmly, ensuring all connections are secured tightly.

Step 5 : Installation

IMPORTANT: Plumbing compound should not be used to seal the pipework as oils leaching from the compound will prevent the solenoid valve from functioning correctly.

Cut the pipework with a plumbers pipe cutter, remove sharp edges and burrs. The diaphragm in the solenoid valve will be damaged by oil, grease and debris. The valve should be used on oil free pipework only.

To prevent long term contamination the pipework must be thoroughly purged prior to fitting the solenoid valve.

Fit the solenoid valve ensuring pipes are fully engaged in joints. Take care that the valve is fitted with the correct direction of flow as indicated on the valve. Be careful not to over tighten any joints.

For mixed water output, a TMV mixing valve is required to safely control the hot water temperature. 'Standard Setup' for typical TMV installation.

Fit the shower head as per the manufacturers instructions.

Connect the battery pack or power supply unit to the remaining split connector socket.

Once the shower system is powered up, allow 30 seconds for the sensor to calibrate. Attempting to operate the shower within this period may cause the sensor to false trigger. If false triggering occurs, disconnect power for 1 minute, then reconnect and allow the sensor to recalibrate.

Plug and Socket Connections

Optional extension cables (1, 2 metre) are all available from the manufacturer to extend the output of the PSU to the vicinity of the shower heads (for multiple installations), see 'Fault finding & General Cleaning'.

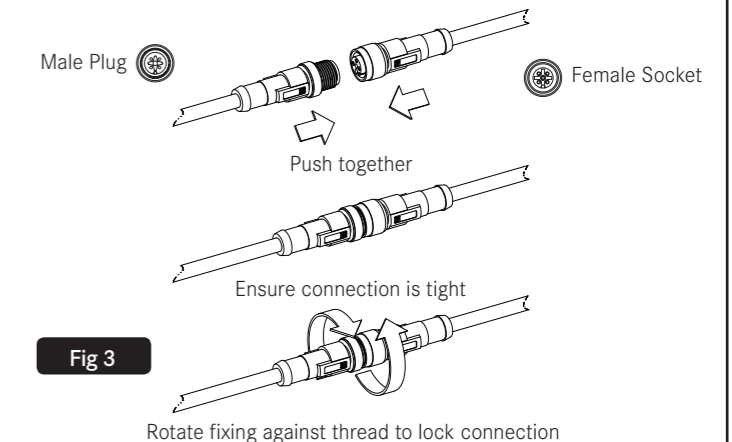


Fig 3